


IW-4 PLUG


IW-4PLUG with 3-way wire installation

Strip the insulation from the wire to expose 1/4 inch (6mm) of the conductor. Insert the wire in one of the three ways.


- 1** Insert the stripped wire into the back of the wire-lock and spread the strands around the face of the wire-lock as shown below. Screw the wire lock into the body of the connector and tighten securely.

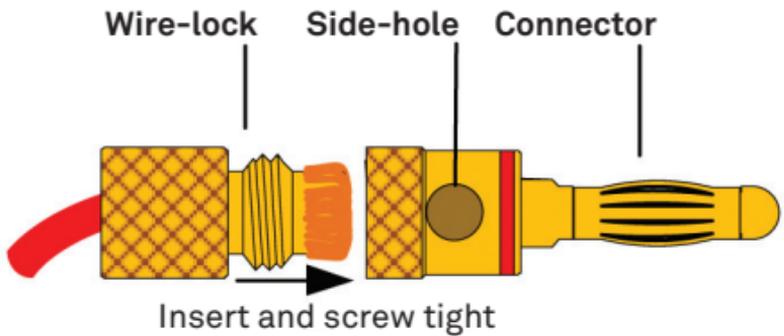


- 2** Pass the stripped wire through the back of wire-lock. Bend the conductors at an angle and insert them into the back of the connector so that they protrude slightly from the side-hole as shown below. Screw the wire-lock into the body of the connector and tighten securely.

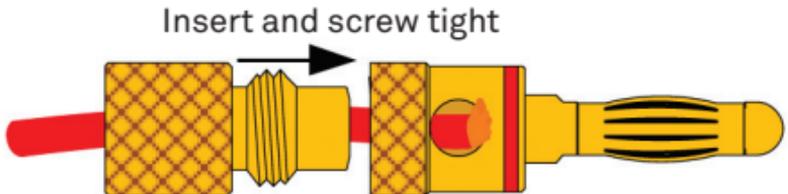

- 3** Loosen the wire-lock and insert the stripped wire into the side-hole of the connector as shown below. Screw the wire-lock into the body of the connector and tighten securely.

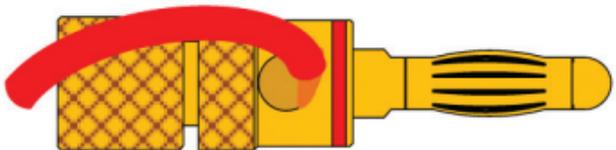

Note: Connectors can be stacked as shown below.

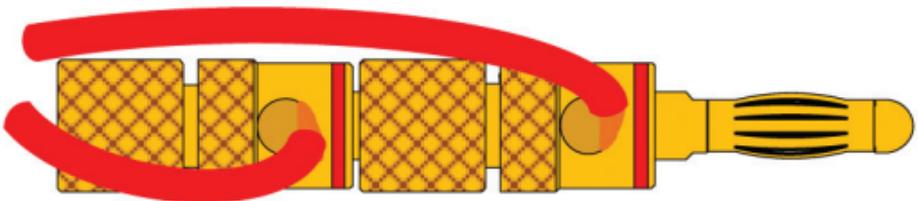

After initially tightening the wire-lock, wiggling the wire and retightening the lock will help to ensure a secure and lasting connection.

Rev. A