


For Rough-In Kit Models: **RIB-7, RIB-62 & RIB-82**

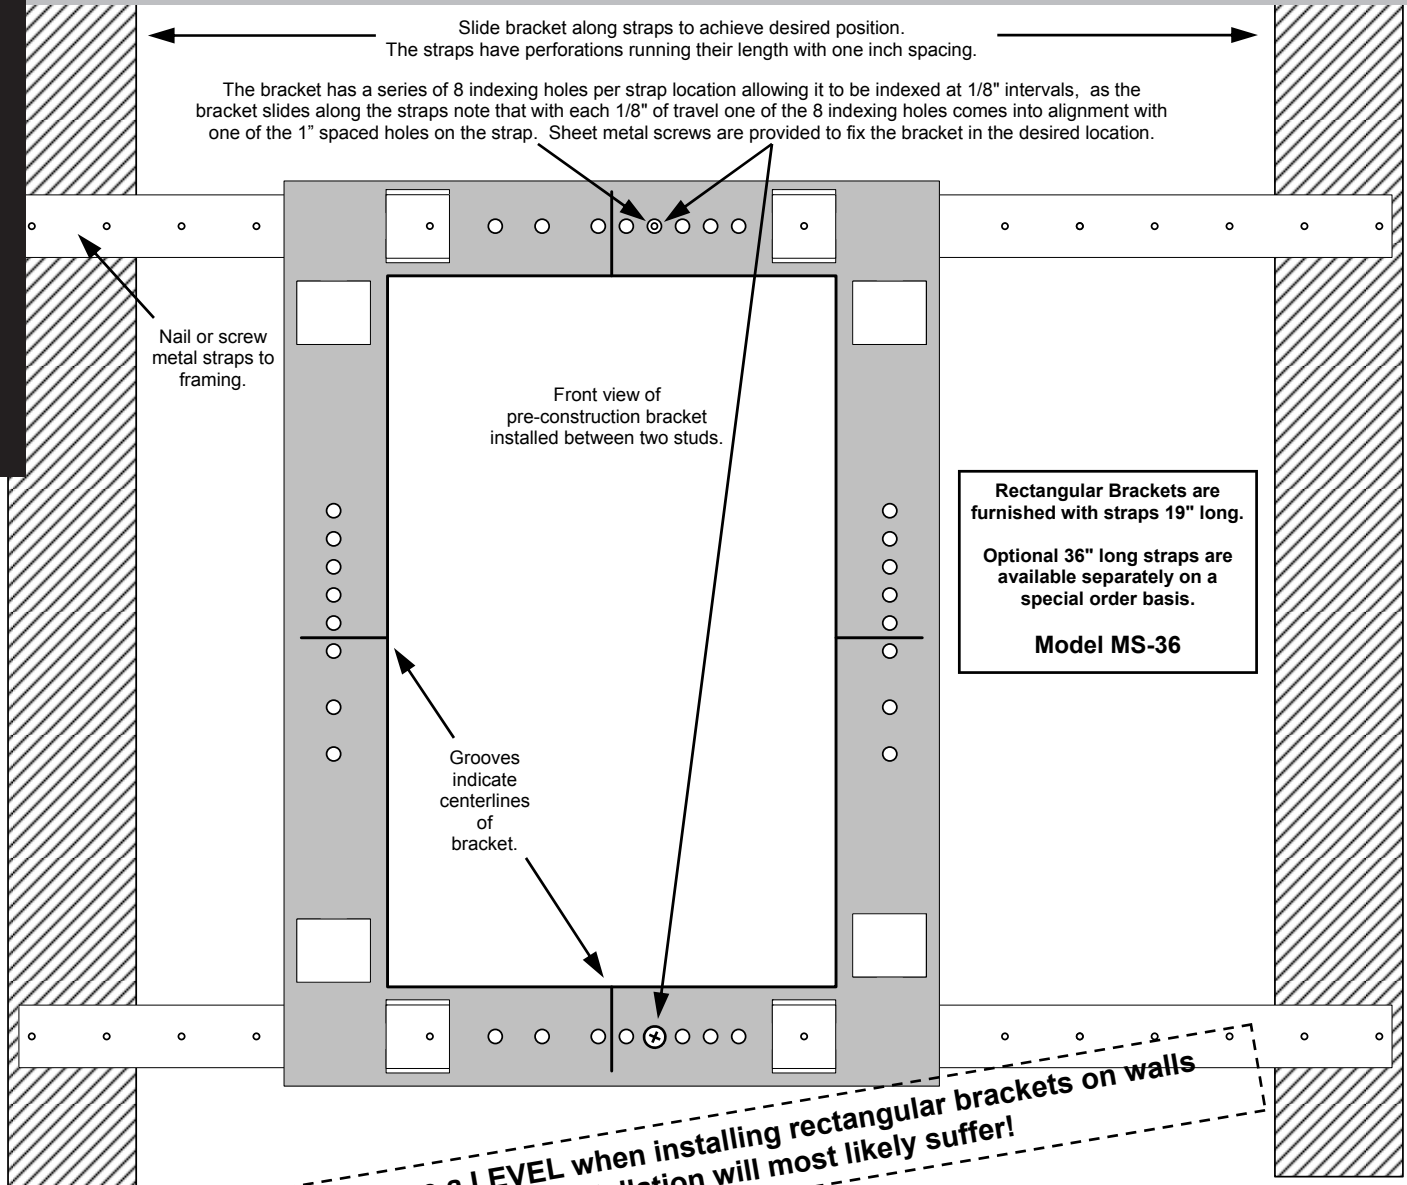

Be certain to use a LEVEL when installing rectangular brackets on walls or the final installation will most likely suffer!

